



lghealthsystems.eu

Reverse Osmosis Machine User Guide

It removes water in seconds!



Place the device on a flat surface and plug it into the mains.



Next step

After placing the device on a flat surface and plugging it into the mains, the display will turn on automatically, you do not have to press any buttons, but do the following:



Remove the tank cap

Pull the tabs and remove the tank lid, you will see two compartments: a wider one called "Tap Water" and a narrower one called "Outlet Water".

Pull up

Next, you will find a handle which you have to pull upwards to uncouple the tank from the machine.

Refill the Tap Water tank

After removing the tank from the machine, place it under the tap and fill only the "Tap Water" compartment, that is, the widest compartment, up to the black line.


Do not fill the other compartment.

Place the tank with the help of the two little tabs at the back of the machine until it fits perfectly.



When the full tank is inserted, the machine will start to make a noise and automatically empty the Tap Water compartment while the Outlet Water compartment is being filled.

This means that the filling process of the osmosis machine has started and a flashing white drop appears.

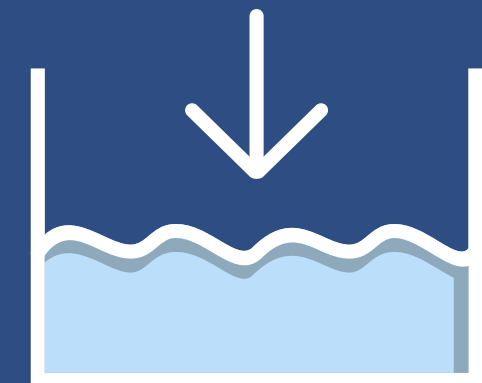

When the noise stops, the Outlet Water tank will be full and a red drop will appear on the display.



The machine has an internal tank which has to be filled, the appearance of the red drop indicates that this internal tank is not full.

Remove the tank again and empty it completely, both the remaining Tap Water and the Outlet Water, which will be full.



It is very important to empty both the Tap Water and Outlet Water tanks, there should be no water left in either compartment.


Refill again only the Tap Water compartment and place the tank in the machine.

When you place the tank in the machine, you will see bubbles rising from the bottom to the top. This means that it is perfectly fitted.



Wait until the Tap Water compartment is empty, and the Outlet Water compartment is full.



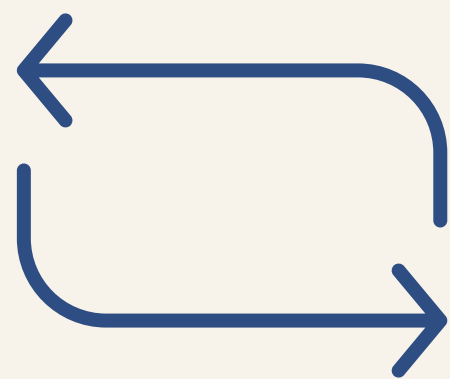


If the red drop reappears on the display, empty the water from both compartments again and refill only the Tap Water compartment.

This process can be repeated up to 3 times, as the inner tank needs to be completely filled.

If the inner tank is full, **the red drop may also appear when the tank is not correctly fitted.** Check that you have fitted it correctly.

**If the red drop disappears
and the Outlet Water
compartment is half full, it
would be better to empty
both tanks again and fill only
the Tap Water tank.**





Once the drop has disappeared and the Tap Water tank is full, you can now use your osmosis machine!

For optimal use of the osmosis machine, it is recommended to purge the machine the first time.

To do this, press and hold the Hot 100°C button for a few seconds until two zeros appear on the display.

This will begin the process of purging the machine, emptying the remaining water internally. Once the draining is complete, press the power button.

If the red drop appears again, repeat the filling process until it disappears.

Complement your osmosis water with NaturalPharma marine electrolytes.



After the osmosis process, the water loses all its impurities, but also some minerals.

For this purpose, we have marine electrolytes **100% natural and organic** from the brand NaturalPharma.

It contains **more than 70 essential minerals and trace elements** that your body needs in the right proportions, thus contributing to the proper functioning of your body.

BUY NOW



100% natural



Additives free



Gluten free



Sugar free



Cruelty free

If you have any questions, please do not hesitate to contact us.



lghealthsystems.eu



E-MAIL

info@lghealthsystems.eu



PHONE

(+34) 856 92 50 95



WHATSAPP AND TELEGRAM

+34 678 54 97 92

<https://t.me/osmosisinversadomestica>